

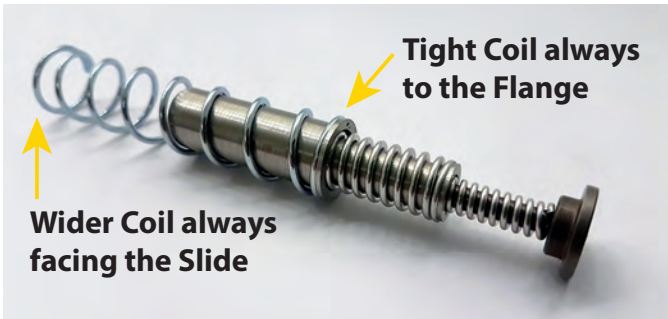


INSTALLATION INSTRUCTIONS FOR DPM TELESCOPIC RECOIL SYSTEMS


ATTENTION: The External Springs the System Includes are Conical. Select Always the Tight Coil to the Flange.

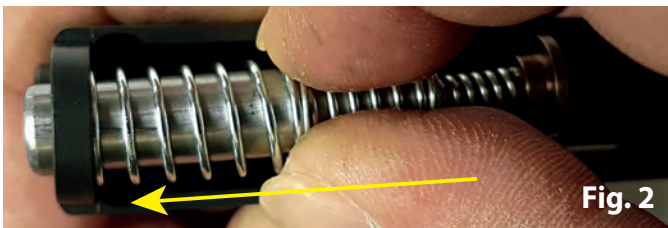



With the Wider Coil facing the Slide, Push from the middle section, until the rod will pass through the Slide hole a few millimeters. (Fig. 1 & Fig. 2)

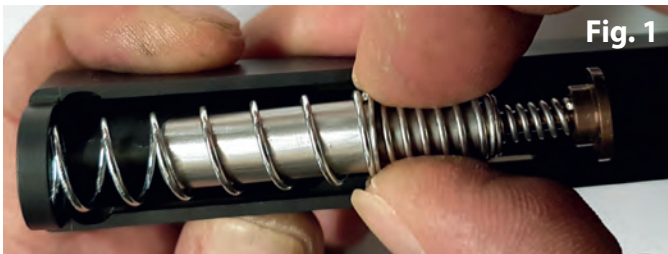

Let the Rod return carefully (Fig. 3) in the Correct Position on the Barrel (Fig. 4). Reassemble the Pistol. Rack the Slide to Confirm Proper Unrestricted Function.

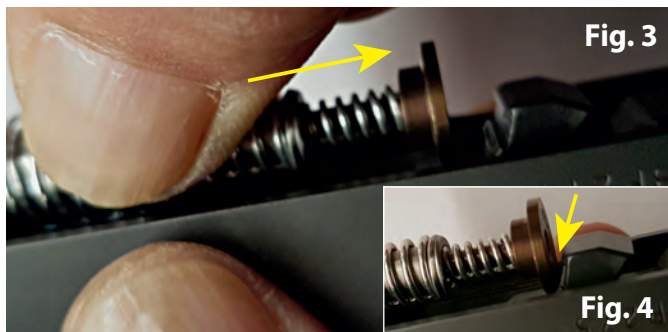

To Disassemble, Push Forward with your Thumb from the behind to Release the System from the Barrel (Fig. 5) and Carefully Retrieve the System in your Hands (Fig. 6).

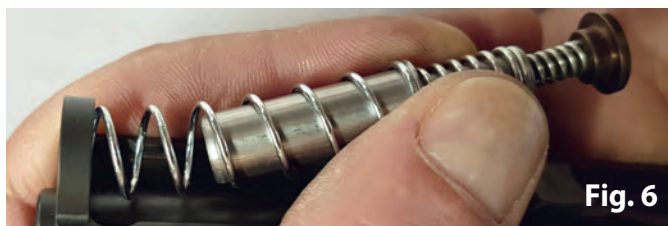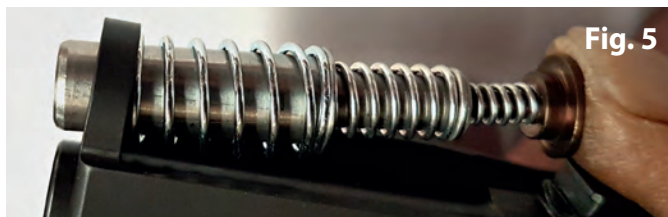

For questions contact the Dealer who supplied you this product.

Or contact us: service@dpmsystems.com

Video instructions: www.dpmsystems.com/faqs Instructions Telescopic